

# MAINTENANCE SCHEDULES - NAFTA

The oil change indicator system will remind you that it is time to take your vehicle in for scheduled maintenance.

On Electronic Vehicle Information Center (EVIC) equipped vehicles “Oil Change Required” will be displayed in the EVIC and a single chime will sound, indicating that an oil change is necessary.

Based on engine operation conditions the oil change indicator message will illuminate, this means that service is required for your vehicle. Have your vehicle serviced as soon as possible, within the next 500 miles (805 km).

- NOTE:**
- **The oil change indicator message will not monitor the time since the last oil change. Change your vehicles oil if it has been 6 months since your last oil change even if the oil change indicator message is NOT illuminated.**
  - **Change your engine oil more often if you drive your vehicle off-road for an extended period of time.**
  - **Under no circumstances should oil change intervals exceed 8,000 miles (13,000 km) or 6 months, whichever comes first.**

## OIL CHANGE INDICATOR - RESET

The vehicle is equipped with an engine oil change indicator system. The “Oil Change Required” message will flash in the EVIC display for approximately 10 seconds after a single chime has sounded to indicate the next scheduled oil change interval. The engine oil change indicator system is duty cycle based, which means the engine oil change interval may fluctuate dependent upon your personal driving style.

Unless reset, this message will continue to display each time you turn the ignition switch to the ON/RUN position. To turn off the message temporarily, press and release the Menu button. To reset the oil change indicator system (after performing the scheduled maintenance) perform the following procedure:

1. Turn the ignition switch to the “ON” position (Do not start the engine).
2. Fully depress the accelerator pedal slowly three times within 10 seconds.
3. Turn the ignition switch to the “LOCK” position.

**NOTE: If the indicator message illuminates when you start the vehicle, the oil change indicator system did not reset. If necessary repeat this procedure.**

## At Each Stop for Fuel

- Check the engine oil level about 5 minutes after a fully warmed engine is shut off. Checking the oil level while the vehicle is on level ground will improve the accuracy of the oil level reading. Add oil only when the level is at or below the ADD or MIN mark.
- Check the windshield washer solvent and add if required.

## Once a Month

- Check tire pressure and look for unusual wear or damage.
- Inspect the battery and clean and tighten the terminals as required.
- Check the fluid levels of the coolant reservoir, brake master cylinder, power steering and transmission (5.7L only) and add as needed.
- Check all lights and other electrical items for correct operation.

## At Each Oil Change

- Change the engine oil filter.
- Inspect the brake hoses and lines.

**CAUTION:** Failure to perform the required maintenance items may result in damage to the vehicle.

## Required Maintenance Intervals

Perform Maintenance Every			Maintenance Items
(Where time and mileage are listed, follow the interval that occurs first.)			
Miles	Kilometers	Months	
8000	13000	6	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.</li> <li>■ Rotate the tires, rotate at the first sign of irregular wear, even if it occurs before 8,000 miles (13 000 km).</li> </ul>
16000	26000	12	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.</li> <li>■ Rotate the tires, rotate at the first sign of irregular wear, even if it occurs before 16,000 miles (26 000 km).</li> <li>■ If using your vehicle for any of the following: Dusty or off-road conditions. Inspect the engine air cleaner filter; replace if necessary.</li> <li>■ Inspect the brake linings, replace if necessary.</li> <li>■ Inspect the CV joints. Perform the first inspection at 16,000 miles (26 000 km) or 12 months.</li> <li>■ Inspect exhaust system. Perform the first inspection at 16,000 miles (26 000 km) or 12 months.</li> <li>■ Inspect the front suspension, tie rod ends and boot seals for cracks or leaks and all parts for damage, wear, improper looseness or end play; replace if necessary.</li> </ul>
24000	39000	18	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.</li> <li>■ Rotate the tires, rotate at the first sign of irregular wear, even if it occurs before 24,000 miles (39 000 km).</li> <li>■ Inspect the CV joints.</li> <li>■ Inspect exhaust system.</li> <li>■ Inspect the front and rear axle fluid, change if using your vehicle for police, taxi, fleet, off-road or frequent trailer towing.</li> </ul>
32000	52000	24	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.</li> <li>■ Rotate the tires, rotate at the first sign of irregular wear, even if it occurs before 32,000 miles (52 000 km).</li> <li>■ Replace the engine air cleaner filter.</li> <li>■ <b>Replace the spark plugs (5.7L Engine).</b></li> <li>■ Adjust parking brake on vehicles equipped with four-wheel disc brakes.</li> <li>■ Inspect the transfer case fluid.</li> <li>■ Inspect the brake linings, replace if necessary.</li> <li>■ Inspect the front suspension, tie rod ends and boot seals for cracks or leaks and all parts for damage, wear, improper looseness or end play; replace if necessary.</li> </ul>

40000	65000	30	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.</li> <li>■ Rotate the tires, rotate at the first sign of irregular wear, even if it occurs before 40,000 miles (65 000 km).</li> </ul>
48000	78000	36	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.</li> <li>■ Rotate the tires, rotate at the first sign of irregular wear, even if it occurs before 48,000 miles (78 000 km).</li> <li>■ If using your vehicle for any of the following: Dusty or off-road conditions. Inspect the engine air cleaner filter; replace if necessary.</li> <li>■ Inspect the brake linings, replace if necessary.</li> <li>■ Inspect the CV joints.</li> <li>■ Inspect exhaust system.</li> <li>■ Inspect the front suspension, tie rod ends and boot seals for cracks or leaks and all parts for damage, wear, improper looseness or end play; replace if necessary.</li> <li>■ Inspect the front and rear axle fluid, change if using your vehicle for police, taxi, fleet, off-road or frequent trailer towing.</li> </ul>
56000	91000	42	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.</li> <li>■ Rotate the tires, rotate at the first sign of irregular wear, even if it occurs before 56,000 miles (91 000 km).</li> </ul>
64000	104000	48	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.</li> <li>■ Rotate the tires, rotate at the first sign of irregular wear, even if it occurs before 64,000 miles (104 000 km).</li> <li>■ Replace the engine air cleaner filter.</li> <li>■ Inspect the brake linings; replace if necessary.</li> <li>■ <b>Replace the spark plugs (5.7L Engine).</b></li> <li>■ Adjust parking brake on vehicles equipped with four-wheel disc brakes.</li> <li>■ Change the automatic transmission fluid and main sump filter if using your vehicle for any of the following: police, taxi, fleet, or frequent trailer towing.</li> <li>■ Change the transfer case fluid if using your vehicle for any of the following: police, taxi, fleet, or frequent trailer towing.</li> <li>■ Inspect the front suspension, tie rod ends and boot seals for cracks or leaks and all parts for damage, wear, improper looseness or end play; replace if necessary.</li> </ul>
72000	117000	54	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.</li> <li>■ Rotate the tires, rotate at the first sign of irregular wear, even if it occurs before 72,000 miles (117 000 km).</li> <li>■ Inspect the CV joints.</li> <li>■ Inspect exhaust system.</li> <li>■ Inspect the front and rear axle fluid, change if using your vehicle for police, taxi, fleet, off-road or frequent trailer towing.</li> </ul>
80000	130000	60	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.</li> <li>■ Rotate the tires, rotate at the first sign of irregular wear, even if it occurs before 80,000 miles (130 000 km).</li> <li>■ If using your vehicle for any of the following: Dusty or off-road conditions. Inspect the engine air cleaner filter; replace if necessary.</li> <li>■ Flush and replace the engine coolant if not done at 104,000 miles (173 000 km).</li> <li>■ Inspect the brake linings, replace if necessary.</li> </ul>

			<ul style="list-style-type: none"> <li>■ Inspect the front suspension, tie rod ends and boot seals for cracks or leaks and all parts for damage, wear, improper looseness or end play; replace if necessary.</li> </ul>
88000	147000	66	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.</li> <li>■ Rotate the tires, rotate at the first sign of irregular wear, even if it occurs before 88,000 miles (147 000 km).</li> </ul>
96000	160000	72	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.</li> <li>■ Rotate the tires, rotate at the first sign of irregular wear, even if it occurs before 96,000 miles (160 000 km).</li> <li>■ Replace the engine air cleaner filter.</li> <li>■ <b>Replace the spark plugs (3.6L Engine).</b></li> <li>■ <b>Replace the spark plugs (5.7L Engine).</b></li> <li>■ <b>Inspect and replace PCV valve if necessary.†</b></li> <li>■ Adjust parking brake on vehicles equipped with four-wheel disc brakes.</li> <li>■ Inspect the transfer case fluid.</li> <li>■ Inspect the brake linings, replace if necessary.</li> <li>■ Inspect the CV joints.</li> <li>■ Inspect exhaust system.</li> <li>■ Inspect the front suspension, tie rod ends and boot seals for cracks or leaks and all parts for damage, wear, improper looseness or end play; replace if necessary.</li> <li>■ Inspect the front and rear axle fluid, change if using your vehicle for police, taxi, fleet, off-road or frequent trailer towing.</li> </ul>
104000	173000	78	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.</li> <li>■ Rotate the tires, rotate at the first sign of irregular wear, even if it occurs before 104,000 miles (173 000 km).</li> <li>■ Flush and replace the engine coolant if not done at 60 months.</li> </ul>
112000	186000	84	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.</li> <li>■ Rotate the tires, rotate at the first sign of irregular wear, even if it occurs before 112,000 miles (186 000 km).</li> <li>■ If using your vehicle for any of the following: Dusty or off-road conditions. Inspect the engine air cleaner filter; replace if necessary.</li> <li>■ Inspect the brake linings, replace if necessary.</li> <li>■ Inspect the front suspension, tie rod ends and boot seals for cracks or leaks and all parts for damage, wear, improper looseness or end play; replace if necessary.</li> </ul>
120000	199000	90	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.</li> <li>■ Rotate the tires, rotate at the first sign of irregular wear, even if it occurs before 120,000 miles (199 000 km).</li> <li>■ Inspect the CV joints.</li> <li>■ Inspect exhaust system.</li> <li>■ Inspect the front and rear axle fluid, change if using your vehicle for police, taxi, fleet, off-road or frequent trailer towing.</li> <li>■ Change the automatic transmission fluid and filter(s).</li> <li>■ Replace the accessory drive belt(s).</li> </ul>
128000	212000	96	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.</li> <li>■ Rotate the tires, rotate at the first sign of irregular wear, even if it occurs before 128,000 miles (212 000 km).</li> </ul>

			<ul style="list-style-type: none"> <li>■ Replace the engine air cleaner filter.</li> <li>■ <b>Replace the spark plugs (5.7L Engine).</b></li> <li>■ Adjust parking brake on vehicles equipped with four-wheel disc brakes.</li> <li>■ Change the transfer case fluid.</li> <li>■ Inspect the brake linings, replace if necessary.</li> <li>■ Inspect the front suspension, tie rod ends and boot seals for cracks or leaks and all parts for damage, wear, improper looseness or end play; replace if necessary.</li> </ul>
136000	225000	102	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.</li> <li>■ Rotate the tires, rotate at the first sign of irregular wear, even if it occurs before 136,000 miles (225 000 km).</li> </ul>
144000	230000	108	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.</li> <li>■ Rotate the tires, rotate at the first sign of irregular wear, even if it occurs before 144,000 miles (238 000 km).</li> <li>■ If using your vehicle for any of the following: Dusty or off-road conditions. Inspect the engine air cleaner filter; replace if necessary.</li> <li>■ Inspect the brake linings, replace if necessary.</li> <li>■ Inspect the CV joints.</li> <li>■ Inspect exhaust system.</li> <li>■ Inspect the front suspension, tie rod ends and boot seals for cracks or leaks and all parts for damage, wear, improper looseness or end play; replace if necessary.</li> <li>■ Inspect the front and rear axle fluid, change if using your vehicle for police, taxi, fleet, off-road or frequent trailer towing.</li> </ul>
152000	251000	114	<ul style="list-style-type: none"> <li>■ Change the engine oil and engine oil filter.</li> <li>■ Rotate the tires, rotate at the first sign of irregular wear, even if it occurs before 152,000 miles (251 000 km).</li> </ul>

† This maintenance is recommended by the manufacturer to the owner, but is not required to maintain emissions warranty.

**WARNING:**

- **You can be badly injured working on or around a motor vehicle. Do only service work for which you have the knowledge and the right equipment. If you have any doubt about your ability to perform a service job, take your vehicle to a competent mechanic.**
- **Failure to properly inspect and maintain your vehicle could result in a component malfunction and effect vehicle handling and performance. This could cause an accident**

**Failure to follow these instructions may result in possible serious or fatal injury.**